



CPS19-LA00A10-SNCCWTWF-AI0YMPVAR-W1002-S

□□□□ □□□□: CPS19-LA00A10-SNCCWTWF-AI0YMPVAR-W1002-S
 □□□□ / □□□□: Schurter
 □□□□ □□□□□□: SWITCH PUSHBUTTON SPST 100MA 42V
 □□□□ □□□□: [PDF](#) CPS19-LA00A10-SNCCWTWF-AI0YMPVAR-W1002-S.pdf
 □ RoHS □□□□: □□□□ □□ / RoHS □□□□
 □: □□□□ □□□□
 □□□□□□ □□□□: DHL/Fedex/TNT/UPS/EMS



□□□□ □□□□ □□□□ □□□□. □□□□
 □□□□□□ □□□□□□ □□□□□□.

□ CPS19-LA00A10-SNCCWTWF-AI0YMPVAR-W1002-S □□□□ □□□□□□□□

□□□□ □□□□	CPS19-LA00A10-SNCCWTWF-AI0YMPVAR-W1002-S
□□□□	Schurter
□□□□	SWITCH PUSHBUTTON SPST 100MA 42V
□□□□□□ □□ □□□□ / ROHS □□□□	□□□□ □□□□ / RoHS □□□□□□
□□ □□	PDF CPS19-LA00A10-SNCCWTWF-AI0YMPVAR-W1002-S.pdf
□□□□□□□□ □□ - □□	60V
□□□□□□□□ □□□□ - □□	42V
□□□□	Capacitive, Illuminated
□□□□□□ □□	Wire Leads
□□□□ □□□□	Off-On
□□□□□□	CPS
□□□□ □□□□□□ □□□□	Circular - 19.10mm Dia
□□□□	Bulk
□□□□ □□□□ □□□□	-40°C ~ 60°C
□□□□□□ □□□□	Panel Mount, Front
□□□□□□ □□□□ □□□□ (□□□□□□□□)	1 (Unlimited)
□□□□□□ □□□□	-
□□□□□□ □□ □□□□ / ROHS □□□□	Lead free / RoHS Compliant
□□□□□□ □□□□	IP67 - Dust Tight, Waterproof
□□□□□□ □□□□ (□□□□□□)	5 ~ 28 VDC
□□□□□□ □□□□□□, □□□□	LED, Yellow/Magenta
□□ □□□□ □□□□	Ceramic Actuator, Finger Guide, B Symbol
□□□□□□□□ □□	-
□□□□ □□□□	Pushbutton Switch SPST Capacitive, Illuminated Panel Mount, Front
□□□□ □□□□	100mA (AC/DC)
□□□□ - □□□□□□□□ / □□	Clear (White Filter/Diffuser)
□□□□	SPST
□□□□□□□□ □□□□	Round, Button, Flush

□□□□ □□□□□□

Schurter CPS19-LA00A10-SNCCWTWF-AI0YMPVAR-W1002-S	□ CPS19-LA00A10-SNCCWTWF-AI0YMPVAR-W1002-S □□□□	CPS19-LA00A10-SNCCWTWF-AI0YMPVAR-W1002-S □□□□
CPS19-LA00A10-SNCCWTWF-AI0YMPVAR-W1002-S □□	CPS19-LA00A10-SNCCWTWF-AI0YMPVAR-W1002-S □□□□	CPS19-LA00A10-SNCCWTWF-AI0YMPVAR-W1002-S □□□□
□ CPS19-LA00A10-SNCCWTWF-AI0YMPVAR-W1002-S □□□□ □□□□ □□□□	CPS19-LA00A10-SNCCWTWF-AI0YMPVAR-W1002-S □□□□ □□□□ □□□□	□ CPS19-LA00A10-SNCCWTWF-AI0YMPVAR-W1002-S □□□□ □□□□
CPS19-LA00A10-SNCCWTWF-AI0YMPVAR-W1002-S □□□□□□	CPS19-LA00A10-SNCCWTWF-AI0YMPVAR-W1002-S □□□□	Schurter CPS19-LA00A10-SNCCWTWF-AI0YMPVAR-W1002-S □□□□
Schurter CPS19-LA00A10-SNCCWTWF-AI0YMPVAR-W1002-S	Schurter □□□□	□ Schurter □□□□
Schurter CPS19-LA00A10-SNCCWTWF-AI0YMPVAR-W1002-S	Schurter Inc. CPS19-LA00A10-SNCCWTWF-AI0YMPVAR-W1002-S	

□□□□ □□□□

<p>CPS19-LA00A10-SNCCWTWF-AI0YMPVAR-W1006-S □□□□□□: Schurter □□□□□□: SWITCH PUSHBUTTON SPST 100MA 42V □□□□ □□□□ □□: Out stock</p> <p>RFQ</p>	<p>CPS19-LA00A10-SNCCWTWF-AI0YMPVAR-W1003-S □□□□□□: Schurter □□□□□□: SWITCH PUSHBUTTON SPST 100MA 42V □□□□ □□□□ □□: Out stock</p> <p>RFQ</p>
<p>CPS19-LA00A10-SNCCWTWF-AI0YLVAR-W1074-S □□□□□□: Schurter □□□□□□: SWITCH PUSHBUTTON SPST 100MA 42V □□□□ □□□□ □□: Out stock</p> <p>RFQ</p>	<p>CPS19-LA00A10-SNCCWTWF-AI0YMPVAR-W1001-S □□□□□□: Schurter □□□□□□: SWITCH PUSHBUTTON SPST 100MA 42V □□□□ □□□□ □□: Out stock</p> <p>RFQ</p>
<p>CPS19-LA00A10-SNCCWTWF-AI0YMPVAR-W0000-S □□□□□□: Schurter □□□□□□: SWITCH PUSHBUTTON SPST 100MA 42V □□□□ □□□□ □□: Out stock</p> <p>RFQ</p>	<p>CPS19-LA00A10-SNCCWTWF-AI0YMPVAR-W1008-S □□□□□□: Schurter □□□□□□: SWITCH PUSHBUTTON SPST 100MA 42V □□□□ □□□□ □□: Out stock</p> <p>RFQ</p>
<p>CPS19-LA00A10-SNCCWTWF-AI0YMPVAR-W1004-S □□□□□□: Schurter □□□□□□: SWITCH PUSHBUTTON SPST 100MA 42V □□□□ □□□□ □□: Out stock</p> <p>RFQ</p>	<p>CPS19-LA00A10-SNCCWTWF-AI0YLVAR-W1076-S □□□□□□: Schurter □□□□□□: SWITCH PUSHBUTTON SPST 100MA 42V □□□□ □□□□ □□: Out stock</p> <p>RFQ</p>
<p>CPS19-LA00A10-SNCCWTWF-AI0YMPVAR-W1007-S □□□□□□: Schurter □□□□□□: SWITCH PUSHBUTTON SPST 100MA 42V □□□□ □□□□ □□: Out stock</p> <p>RFQ</p>	<p>CPS19-LA00A10-SNCCWTWF-AI0YLVAR-W1077-S □□□□□□: Schurter □□□□□□: SWITCH PUSHBUTTON SPST 100MA 42V □□□□ □□□□ □□: Out stock</p> <p>RFQ</p>
<p>CPS19-LA00A10-SNCCWTWF-AI0YLVAR-W1075-S □□□□□□: Schurter □□□□□□: SWITCH PUSHBUTTON SPST 100MA 42V □□□□ □□□□ □□: Out stock</p> <p>RFQ</p>	<p>CPS19-LA00A10-SNCCWTWF-AI0YMPVAR-W1005-S □□□□□□: Schurter □□□□□□: SWITCH PUSHBUTTON SPST 100MA 42V □□□□ □□□□ □□: Out stock</p> <p>RFQ</p>