



BEI Sensors

HS35F-100-R2-SS-2000-ABZC-28V/V-DM18-S



□□□□ □□□□: HS35F-100-R2-SS-2000-ABZC-28V/V-DM18-S
 □□□□ / □□□□: BEI Sensors
 □□□□ □□□□□□: ROTARY ENCODER OPTICAL 2000PPR
 □□□□ □□□□: HS35F-100-R2-SS-2000-ABZC-28V/V-DM18-S.pdf
 RoHS □□□□ □□□□□□□□ / □□□□□□□□
 □□□□ □□□□
 □□□□□□ □□□□: DHL/Fedex/TNT/UPS/EMS



□□□□ □□□□ □□□□ □□□□. □□□□
 □□□□□□ □□□□□□ □□□□□□.

HS35F-100-R2-SS-2000-ABZC-28V/V-DM18-S □□□□ □□□□□□□□

□□□□ □□□□	HS35F-100-R2-SS-2000-ABZC-28V/V-DM18-S
□□□□	BEI Sensors
□□□□	ROTARY ENCODER OPTICAL 2000PPR
□□□□□□ □□ □□□□ / ROHS □□□□	□□□□□□□□□□ / □□□□□□□□□□
□□ □□	HS35F-100-R2-SS-2000-ABZC-28V/V-DM18-S.pdf
□□□□ - □□□□□□	5 V ~ 28 V
□□□□□□ □□	Connector
□□□□□□	HS35
□□□□□□□□ □□□□ (□□□□□□ □□□□)	7.5B
□□□□ □□□□□□	2000
□□□□ □□□□	Quadrature with Index (Incremental)
□□□□ □□□□	01102-022 1724-1040
□□□□□□	User Selectable
□□□□□□ □□□□	Chassis Mount, Motors
□□□□□□ □□□□ □□□□ □□	5 Weeks
□□□□□□ □□ □□□□ / ROHS □□□□	Not applicable / Not applicable
ENCODER □□□□	Optical
□□□□	No
□□□□ □□□□	No
□□□□□□□□ □□□□	Hole for Shaft

□□□□ □□□□□□

BEI Sensors HS35F-100-R2-SS-2000-ABZC-28V/V-DM18-S	<input type="checkbox"/> HS35F-100-R2-SS-2000-ABZC-28V/V-DM18-S □□□□	HS35F-100-R2-SS-2000-ABZC-28V/V-DM18-S □□□□
HS35F-100-R2-SS-2000-ABZC-28V/V-DM18-S □□	HS35F-100-R2-SS-2000-ABZC-28V/V-DM18-S □□□□	HS35F-100-R2-SS-2000-ABZC-28V/V-DM18-S □□□□
<input type="checkbox"/> HS35F-100-R2-SS-2000-ABZC-28V/V-DM18-S □□□□ □□□□ □□□□	HS35F-100-R2-SS-2000-ABZC-28V/V-DM18-S □□□□ □□□□ □□□□	<input type="checkbox"/> HS35F-100-R2-SS-2000-ABZC-28V/V-DM18-S □□□□ □□□□
HS35F-100-R2-SS-2000-ABZC-28V/V-DM18-S □□□□□□	HS35F-100-R2-SS-2000-ABZC-28V/V-DM18-S □ □□□	BEI Sensors HS35F-100-R2-SS-2000-ABZC-28V/V-DM18-S □ □□□
BEI Sensors HS35F-100-R2-SS-2000-ABZC-28V/V-DM18-S	BEI Sensors □□□□	<input type="checkbox"/> BEI Sensors □□□□
BEI Sensors HS35F-100-R2-SS-2000-ABZC-28V/V-DM18-S	Sensata Technologies – BEI Sensors HS35F-100-R2-SS-2000-ABZC-28V/V-DM18-S	

□□□□ □□□□

<p>HS35F-100-R2-SS-12GC-S3-CW-SM18 □□□□□□: BEI Sensors □□□□□□: ROTARY ENCODER OPTICAL 12PPR □□□□ □□□□ □□: 1 pcs <input type="button" value="RFQ"/></p>	<p>HS35F-100-R5-BS-1024-ABZC-28V/V-SM18-S □□□□□□: BEI Sensors □□□□□□: ROTARY ENCODER OPTICAL 1024PPR □□□□ □□□□ □□: Out stock <input type="button" value="RFQ"/></p>
<p>HS35F-100-R2-SS-8192-T2-AZ-28V/OC-SM16 □□□□□□: BEI Sensors □□□□□□: ROTARY ENCODER OPTICAL 8192PPR □□□□ □□□□ □□: Out stock <input type="button" value="RFQ"/></p>	<p>HS35F-100-R2-SS-2048-ABZC-28V/V-SM18-S □□□□□□: BEI Sensors □□□□□□: ROTARY ENCODER OPTICAL 2048PPR □□□□ □□□□ □□: 2 pcs <input type="button" value="RFQ"/></p>
<p>HS35F-100-R2-SS-2048-ABZC-5V/V-SM18-EX □□□□□□: BEI Sensors □□□□□□: ROTARY ENCODER OPTICAL 2048PPR □□□□ □□□□ □□: Out stock <input type="button" value="RFQ"/></p>	<p>HS35F-100-R2-SS-2000-ABZC-28V/5-SM18 □□□□□□: BEI Sensors □□□□□□: ROTARY ENCODER OPTICAL 2000PPR □□□□ □□□□ □□: Out stock <input type="button" value="RFQ"/></p>
<p>HS35F-100-R2-SS-12NB-28V/5-CCW-SM14/19 □□□□□□: BEI Sensors □□□□□□: ROTARY ENCODER ABSOLUTE 4096PPR □□□□ □□□□ □□: Out stock <input type="button" value="RFQ"/></p>	<p>HS35F-100-R2-SS-13GC-S3-CW-SM18 □□□□□□: BEI Sensors □□□□□□: ROTARY ENCODER OPTICAL 13PPR □□□□ □□□□ □□: 3 pcs <input type="button" value="RFQ"/></p>
<p>HS35F-100-R2-SS-14,400-T4-ABZC-28V/5-SM18 □□□□□□: BEI Sensors □□□□□□: ROTARY ENCODER OPTICAL 14400PPR □□□□ □□□□ □□: Out stock <input type="button" value="RFQ"/></p>	<p>HS35F-100-R2-SS-1800-ABZC-28V/V-SM18-S □□□□□□: BEI Sensors □□□□□□: ROTARY ENCODER OPTICAL 1800PPR □□□□ □□□□ □□: Out stock <input type="button" value="RFQ"/></p>
<p>HS35F-100-R2-SS-500-ABZC-28V/V-SM18-S □□□□□□: BEI Sensors □□□□□□: ROTARY ENCODER OPTICAL 500PPR □□□□ □□□□ □□: Out stock <input type="button" value="RFQ"/></p>	<p>HS35F-100-R9-BS-1024-ABZC-28V/V-SCS18-S □□□□□□: BEI Sensors □□□□□□: ROTARY ENCODER OPTICAL 1024PPR □□□□ □□□□ □□: Out stock <input type="button" value="RFQ"/></p>