



### CPS19-LA00A10-SNCSNCF-RI0CWVAR-W1003-S

□□□□ □□□□: CPS19-LA00A10-SNCSNCF-RI0CWVAR-W1003-S  
 □□□□ / □□□□: Schurter  
 □□□□ □□□□□□: SWITCH PUSHBUTTON SPST 100MA 42V  
 □□□□ □□□□: [PDF CPS19-LA00A10-SNCSNCF-RI0CWVAR-W1003-S.pdf](#)  
 □ RoHS □□□ □□□□ / RoHS □□□□  
 □ □□□ □□□□  
 □□□□ □□□□ DHL/Fedex/TNT/UPS/EMS



□□□ □□□□ □□□□ □□□□. □□□□  
 □□□□ □□□□ □□□□□.

□ CPS19-LA00A10-SNCSNCF-RI0CWVAR-W1003-S □□□□ □□□□□□

□□□□ □□□□	CPS19-LA00A10-SNCSNCF-RI0CWVAR-W1003-S
□□□□	Schurter
□□□□	SWITCH PUSHBUTTON SPST 100MA 42V
□□□□□□ □□ □□□□ / ROHS □□□□	□□□□ □□□□ / RoHS □□□□□□
□□ □□	<a href="#">PDF CPS19-LA00A10-SNCSNCF-RI0CWVAR-W1003-S.pdf</a>
□□□□□□ □□ - □□	60V
□□□□□□ □□□□ - □□	42V
□□□□	Capacitive, Illuminated
□□□□□ □□	Wire Leads
□□□□ □□□□	Off-On
□□□□□	CPS
□□□□ □□□□□ □□□□	Circular - 19.10mm Dia
□□□□	Bulk
□□□□ □□□ □□□	-40°C ~ 60°C
□□□□□ □□□□	Panel Mount, Front
□□□□□□ □□□□ □□□□ (□□□□□□)	1 (Unlimited)
□□□□□□ □□□□	-
□□□□□ □□ □□□□ / ROHS □□□□	Lead free / RoHS Compliant
□□□□□ □□□	IP67 - Dust Tight, Waterproof
□□□□□ □□□□□ (□□□□□)	5 ~ 28 VDC
□□□□□ □□□□□, □□□□	LED, Cyan/White
□□ □□□ □□□□	C Symbol
□□□□□□□ □□	-
□□□□ □□□□	Pushbutton Switch SPST Capacitive, Illuminated Panel Mount, Front
□□□□ □□□	100mA (AC/DC)
□□□□ - □□□□□□ / □□	Silver
□□□□	SPST
□□□□□□□ □□□□	Round, Button, Flush

□□□□ □□□□□

Schurter CPS19-LA00A10-SNCSNCF-RI0CWVAR-W1003-S	□ CPS19-LA00A10-SNCSNCF-RI0CWVAR-W1003-S □□□□	CPS19-LA00A10-SNCSNCF-RI0CWVAR-W1003-S □□□□
CPS19-LA00A10-SNCSNCF-RI0CWVAR-W1003-S □□	CPS19-LA00A10-SNCSNCF-RI0CWVAR-W1003-S □□□□	CPS19-LA00A10-SNCSNCF-RI0CWVAR-W1003-S □□□□
□ CPS19-LA00A10-SNCSNCF-RI0CWVAR-W1003-S □□□□ □□□□ □□□□	CPS19-LA00A10-SNCSNCF-RI0CWVAR-W1003-S □□□□ □□□□ □□□□	□ CPS19-LA00A10-SNCSNCF-RI0CWVAR-W1003-S □□□□ □□□□
CPS19-LA00A10-SNCSNCF-RI0CWVAR-W1003-S □□□□□	CPS19-LA00A10-SNCSNCF-RI0CWVAR-W1003-S □□□□	Schurter CPS19-LA00A10-SNCSNCF-RI0CWVAR-W1003-S □□□□
Schurter CPS19-LA00A10-SNCSNCF-RI0CWVAR-W1003-S	Schurter □□□□	□ Schurter □□□□
Schurter CPS19-LA00A10-SNCSNCF-RI0CWVAR-W1003-S	Schurter Inc. CPS19-LA00A10-SNCSNCF-RI0CWVAR-W1003-S	

□□□□ □□□□

<p><b>CPS19-LA00A10-SNCSNCF-RI0CWVAR-W1007-S</b>                  □□□□□: Schurter                  □□□□□: SWITCH PUSHBUTTON SPST 100MA 42V                  □□□□ □□□□ □□: Out stock</p> <p><b>RFQ</b></p>	<p><b>CPS19-LA00A10-SNCSNCF-RI0CWVAR-W0000-S</b>                  □□□□□: Schurter                  □□□□□: SWITCH PUSHBUTTON SPST 100MA 42V                  □□□□ □□□□ □□: Out stock</p> <p><b>RFQ</b></p>
<p><b>CPS19-LA00A10-SNCSNCF-RI0CWVAR-W1004-S</b>                  □□□□□: Schurter                  □□□□□: SWITCH PUSHBUTTON SPST 100MA 42V                  □□□□ □□□□ □□: Out stock</p> <p><b>RFQ</b></p>	<p><b>CPS19-LA00A10-SNCSNCF-RI0CWVAR-W1001-S</b>                  □□□□□: Schurter                  □□□□□: SWITCH PUSHBUTTON SPST 100MA 42V                  □□□□ □□□□ □□: Out stock</p> <p><b>RFQ</b></p>
<p><b>CPS19-LA00A10-SNCSNCF-RI0CWVAR-W1009-S</b>                  □□□□□: Schurter                  □□□□□: SWITCH PUSHBUTTON SPST 100MA 42V                  □□□□ □□□□ □□: Out stock</p> <p><b>RFQ</b></p>	<p><b>CPS19-LA00A10-SNCSNCF-RI0CWVAR-W1008-S</b>                  □□□□□: Schurter                  □□□□□: SWITCH PUSHBUTTON SPST 100MA 42V                  □□□□ □□□□ □□: Out stock</p> <p><b>RFQ</b></p>
<p><b>CPS19-LA00A10-SNCSNCF-RI0CRVAR-W1077-S</b>                  □□□□□: Schurter                  □□□□□: SWITCH PUSHBUTTON SPST 100MA 42V                  □□□□ □□□□ □□: Out stock</p> <p><b>RFQ</b></p>	<p><b>CPS19-LA00A10-SNCSNCF-RI0CWVAR-W1005-S</b>                  □□□□□: Schurter                  □□□□□: SWITCH PUSHBUTTON SPST 100MA 42V                  □□□□ □□□□ □□: Out stock</p> <p><b>RFQ</b></p>
<p><b>CPS19-LA00A10-SNCSNCF-RI0CRVAR-W1075-S</b>                  □□□□□: Schurter                  □□□□□: SWITCH PUSHBUTTON SPST 100MA 42V                  □□□□ □□□□ □□: Out stock</p> <p><b>RFQ</b></p>	<p><b>CPS19-LA00A10-SNCSNCF-RI0CWVAR-W1006-S</b>                  □□□□□: Schurter                  □□□□□: SWITCH PUSHBUTTON SPST 100MA 42V                  □□□□ □□□□ □□: Out stock</p> <p><b>RFQ</b></p>
<p><b>CPS19-LA00A10-SNCSNCF-RI0CWVAR-W1002-S</b>                  □□□□□: Schurter                  □□□□□: SWITCH PUSHBUTTON SPST 100MA 42V                  □□□□ □□□□ □□: Out stock</p> <p><b>RFQ</b></p>	<p><b>CPS19-LA00A10-SNCSNCF-RI0CRVAR-W1076-S</b>                  □□□□□: Schurter                  □□□□□: SWITCH PUSHBUTTON SPST 100MA 42V                  □□□□ □□□□ □□: Out stock</p> <p><b>RFQ</b></p>