



### CPS19-LA00A10-SNCSNCF-RI0YGVAR-W1004-S

□□□□ □□□: CPS19-LA00A10-SNCSNCF-RI0YGVAR-W1004-S  
 □□□□ / □□□: Schurter  
 □□□□ □□□□□: SWITCH PUSHBUTTON SPST 100MA 42V  
 □□□□ □□□: CPS19-LA00A10-SNCSNCF-RI0YGVAR-W1004-S.pdf  
 RoHS □□□ □□□ □□ / RoHS □□□□  
 □□□ □□□  
 □□□□□ □□□□ DHL/Fedex/TNT/UPS/EMS



□□□ □□□□ □□□□ □□□□. □□□□  
 □□□□□ □□□□□ □□□□□.

CPS19-LA00A10-SNCSNCF-RI0YGVAR-W1004-S □□□□ □□□□□□

□□□□ □□□	CPS19-LA00A10-SNCSNCF-RI0YGVAR-W1004-S
□□□□	Schurter
□□□□	SWITCH PUSHBUTTON SPST 100MA 42V
□□□□□□ □□ □□□ / ROHS □□□	□□□ □□ / RoHS □□□□
□□ □□	CPS19-LA00A10-SNCSNCF-RI0YGVAR-W1004-S.pdf
□□□□□□ □□ - □□	60V
□□□□□□ □□□ - □□	42V
□□□□	Capacitive, Illuminated
□□□□□ □□	Wire Leads
□□□□ □□□□	Off-On
□□□□□	CPS
□□□□ □□□□□ □□□□	Circular - 19.10mm Dia
□□□□	Bulk
□□□□ □□□ □□□	-40°C ~ 60°C
□□□□□ □□□□	Panel Mount, Front
□□□□□□ □□□□ □□□ (□□□□□□)	1 (Unlimited)
□□□□□□ □□□□	-
□□□□□ □□ □□□ / ROHS □□□	Lead free / RoHS Compliant
□□□□□ □□□	IP67 - Dust Tight, Waterproof
□□□□□ □□□□ (□□□□)	5 ~ 28 VDC
□□□□□ □□□□, □□□	LED, Yellow/Green
□□ □□□ □□□□	D Symbol
□□□□□□□ □□	-
□□□□ □□□□	Pushbutton Switch SPST Capacitive, Illuminated Panel Mount, Front
□□□□ □□□	100mA (AC/DC)
□□□ - □□□□□ / □□	Silver
□□□□	SPST
□□□□□□□ □□□□	Round, Button, Flush

□□□□ □□□□□

Schurter CPS19-LA00A10-SNCSNCF-RI0YGVAR-W1004-S	<input type="checkbox"/> CPS19-LA00A10-SNCSNCF-RI0YGVAR-W1004-S □□□□	CPS19-LA00A10-SNCSNCF-RI0YGVAR-W1004-S □□□□
CPS19-LA00A10-SNCSNCF-RI0YGVAR-W1004-S □□	CPS19-LA00A10-SNCSNCF-RI0YGVAR-W1004-S □□□□	CPS19-LA00A10-SNCSNCF-RI0YGVAR-W1004-S □□□□
<input type="checkbox"/> CPS19-LA00A10-SNCSNCF-RI0YGVAR-W1004-S □□□□ □□□ □□□□	CPS19-LA00A10-SNCSNCF-RI0YGVAR-W1004-S □□□□ □□□□ □□□□	<input type="checkbox"/> CPS19-LA00A10-SNCSNCF-RI0YGVAR-W1004-S □□□ □□□□
CPS19-LA00A10-SNCSNCF-RI0YGVAR-W1004-S □□□□□	CPS19-LA00A10-SNCSNCF-RI0YGVAR-W1004-S □□□□	Schurter CPS19-LA00A10-SNCSNCF-RI0YGVAR-W1004-S □□□□
Schurter CPS19-LA00A10-SNCSNCF-RI0YGVAR-W1004-S	Schurter □□□□	<input type="checkbox"/> Schurter □□□□
Schurter CPS19-LA00A10-SNCSNCF-RI0YGVAR-W1004-S	Schurter Inc. CPS19-LA00A10-SNCSNCF-RI0YGVAR-W1004-S	

□□□□ □□□□

<p><b>CPS19-LA00A10-SNCSNCF-RI0YCVAR-W1076-S</b>                  □□□□□: Schurter                  □□□□: SWITCH PUSHBUTTON SPST 100MA 42V                  □□□□ □□□□ □□: Out stock  <b>RFQ</b></p>	<p><b>CPS19-LA00A10-SNCSNCF-RI0YGVAR-W1009-S</b>                  □□□□□: Schurter                  □□□□: SWITCH PUSHBUTTON SPST 100MA 42V                  □□□□ □□□□ □□: Out stock  <b>RFQ</b></p>
<p><b>CPS19-LA00A10-SNCSNCF-RI0YGVAR-W0000-S</b>                  □□□□□: Schurter                  □□□□: SWITCH PUSHBUTTON SPST 100MA 42V                  □□□□ □□□□ □□: Out stock  <b>RFQ</b></p>	<p><b>CPS19-LA00A10-SNCSNCF-RI0YGVAR-W1008-S</b>                  □□□□□: Schurter                  □□□□: SWITCH PUSHBUTTON SPST 100MA 42V                  □□□□ □□□□ □□: Out stock  <b>RFQ</b></p>
<p><b>CPS19-LA00A10-SNCSNCF-RI0YGVAR-W1002-S</b>                  □□□□□: Schurter                  □□□□: SWITCH PUSHBUTTON SPST 100MA 42V                  □□□□ □□□□ □□: Out stock  <b>RFQ</b></p>	<p><b>CPS19-LA00A10-SNCSNCF-RI0YGVAR-W1001-S</b>                  □□□□□: Schurter                  □□□□: SWITCH PUSHBUTTON SPST 100MA 42V                  □□□□ □□□□ □□: Out stock  <b>RFQ</b></p>
<p><b>CPS19-LA00A10-SNCSNCF-RI0YGVAR-W1006-S</b>                  □□□□□: Schurter                  □□□□: SWITCH PUSHBUTTON SPST 100MA 42V                  □□□□ □□□□ □□: Out stock  <b>RFQ</b></p>	<p><b>CPS19-LA00A10-SNCSNCF-RI0YGVAR-W1010-S</b>                  □□□□□: Schurter                  □□□□: SWITCH PUSHBUTTON SPST 100MA 42V                  □□□□ □□□□ □□: Out stock  <b>RFQ</b></p>
<p><b>CPS19-LA00A10-SNCSNCF-RI0YCVAR-W1077-S</b>                  □□□□□: Schurter                  □□□□: SWITCH PUSHBUTTON SPST 100MA 42V                  □□□□ □□□□ □□: Out stock  <b>RFQ</b></p>	<p><b>CPS19-LA00A10-SNCSNCF-RI0YGVAR-W1007-S</b>                  □□□□□: Schurter                  □□□□: SWITCH PUSHBUTTON SPST 100MA 42V                  □□□□ □□□□ □□: Out stock  <b>RFQ</b></p>
<p><b>CPS19-LA00A10-SNCSNCF-RI0YGVAR-W1003-S</b>                  □□□□□: Schurter                  □□□□: SWITCH PUSHBUTTON SPST 100MA 42V                  □□□□ □□□□ □□: Out stock  <b>RFQ</b></p>	<p><b>CPS19-LA00A10-SNCSNCF-RI0YGVAR-W1005-S</b>                  □□□□□: Schurter                  □□□□: SWITCH PUSHBUTTON SPST 100MA 42V                  □□□□ □□□□ □□: Out stock  <b>RFQ</b></p>