



### CPS16-LA00A10-SNCSNCF-RI0YGVAR-W1027-S

□□□□ □□□: CPS16-LA00A10-SNCSNCF-RI0YGVAR-W1027-S  
 □□□□ / □□□: Schurter  
 □□□□ □□□□□: SWITCH PUSHBUTTON SPST 100MA 42V  
 □□□□ □□□: CPS16-LA00A10-SNCSNCF-RI0YGVAR-W1027-S.pdf  
 RoHS □□□ □□□ □□ / RoHS □□□□  
 □□□ □□□  
 □□□□□ □□□□ DHL/Fedex/TNT/UPS/EMS



□□□ □□□□ □□□□ □□□□. □□□□  
 □□□□□ □□□□□ □□□□□.

CPS16-LA00A10-SNCSNCF-RI0YGVAR-W1027-S □□□□ □□□□□□

□□□□ □□□	CPS16-LA00A10-SNCSNCF-RI0YGVAR-W1027-S
□□□□	Schurter
□□□□	SWITCH PUSHBUTTON SPST 100MA 42V
□□□□□□ □□ □□□ / ROHS □□□	□□□ □□ / RoHS □□□□
□□ □□	CPS16-LA00A10-SNCSNCF-RI0YGVAR-W1027-S.pdf
□□□□□□ □□ - □□	60V
□□□□□□ □□□ - □□	42V
□□□□	Capacitive, Illuminated
□□□□□ □□	Wire Leads
□□□□ □□□□	Off-On
□□□□□	CPS
□□□□ □□□□□ □□□□	Circular - 16.10mm Dia
□□□□	Bulk
□□□□ □□□ □□□	-40°C ~ 60°C
□□□□□ □□□□	Panel Mount, Front
□□□□□□ □□□□ □□□ (□□□□□□)	1 (Unlimited)
□□□□□□ □□□□	-
□□□□□ □□ □□□ / ROHS □□□	Lead free / RoHS Compliant
□□□□□ □□□	IP67 - Dust Tight, Waterproof
□□□□□ □□□□ (□□□□)	5 ~ 28 VDC
□□□□□ □□□□, □□□	LED, Yellow/Green
□□ □□□ □□□□	0 Symbol
□□□□□□□ □□	-
□□□□ □□□□	Pushbutton Switch SPST Capacitive, Illuminated Panel Mount, Front
□□□□ □□□	100mA (AC/DC)
□□□ - □□□□□ / □□	Silver
□□□□	SPST
□□□□□□□ □□□□	Round, Button, Flush

□□□□ □□□□□

Schurter CPS16-LA00A10-SNCSNCF-RI0YGVAR-W1027-S	<input type="checkbox"/> CPS16-LA00A10-SNCSNCF-RI0YGVAR-W1027-S □□□□	CPS16-LA00A10-SNCSNCF-RI0YGVAR-W1027-S □□□□
CPS16-LA00A10-SNCSNCF-RI0YGVAR-W1027-S □□	CPS16-LA00A10-SNCSNCF-RI0YGVAR-W1027-S □□□□	CPS16-LA00A10-SNCSNCF-RI0YGVAR-W1027-S □□□□
<input type="checkbox"/> CPS16-LA00A10-SNCSNCF-RI0YGVAR-W1027-S □□□□ □□□ □□□□	CPS16-LA00A10-SNCSNCF-RI0YGVAR-W1027-S □□□□ □□□□ □□□□	<input type="checkbox"/> CPS16-LA00A10-SNCSNCF-RI0YGVAR-W1027-S □□□ □□□□
CPS16-LA00A10-SNCSNCF-RI0YGVAR-W1027-S □□□□□	CPS16-LA00A10-SNCSNCF-RI0YGVAR-W1027-S □□□□	Schurter CPS16-LA00A10-SNCSNCF-RI0YGVAR-W1027-S □□□□
Schurter CPS16-LA00A10-SNCSNCF-RI0YGVAR-W1027-S	Schurter □□□□	<input type="checkbox"/> Schurter □□□□
Schurter CPS16-LA00A10-SNCSNCF-RI0YGVAR-W1027-S	Schurter Inc. CPS16-LA00A10-SNCSNCF-RI0YGVAR-W1027-S	

□□□□ □□□□

<p><b>CPS16-LA00A10-SNCSNCF-RI0YGVAR-W1021-S</b>                  □□□□□: Schurter                  □□□□□: SWITCH PUSHBUTTON SPST 100MA 42V                  □□□□ □□□□ □□: Out stock</p> <p><b>RFQ</b></p>	<p><b>CPS16-LA00A10-SNCSNCF-RI0YGVAR-W1025-S</b>                  □□□□□: Schurter                  □□□□□: SWITCH PUSHBUTTON SPST 100MA 42V                  □□□□ □□□□ □□: Out stock</p> <p><b>RFQ</b></p>
<p><b>CPS16-LA00A10-SNCSNCF-RI0YGVAR-W1023-S</b>                  □□□□□: Schurter                  □□□□□: SWITCH PUSHBUTTON SPST 100MA 42V                  □□□□ □□□□ □□: Out stock</p> <p><b>RFQ</b></p>	<p><b>CPS16-LA00A10-SNCSNCF-RI0YGVAR-W1033-S</b>                  □□□□□: Schurter                  □□□□□: SWITCH PUSHBUTTON SPST 100MA 42V                  □□□□ □□□□ □□: Out stock</p> <p><b>RFQ</b></p>
<p><b>CPS16-LA00A10-SNCSNCF-RI0YGVAR-W1029-S</b>                  □□□□□: Schurter                  □□□□□: SWITCH PUSHBUTTON SPST 100MA 42V                  □□□□ □□□□ □□: Out stock</p> <p><b>RFQ</b></p>	<p><b>CPS16-LA00A10-SNCSNCF-RI0YGVAR-W1030-S</b>                  □□□□□: Schurter                  □□□□□: SWITCH PUSHBUTTON SPST 100MA 42V                  □□□□ □□□□ □□: Out stock</p> <p><b>RFQ</b></p>
<p><b>CPS16-LA00A10-SNCSNCF-RI0YGVAR-W1026-S</b>                  □□□□□: Schurter                  □□□□□: SWITCH PUSHBUTTON SPST 100MA 42V                  □□□□ □□□□ □□: Out stock</p> <p><b>RFQ</b></p>	<p><b>CPS16-LA00A10-SNCSNCF-RI0YGVAR-W1032-S</b>                  □□□□□: Schurter                  □□□□□: SWITCH PUSHBUTTON SPST 100MA 42V                  □□□□ □□□□ □□: Out stock</p> <p><b>RFQ</b></p>
<p><b>CPS16-LA00A10-SNCSNCF-RI0YGVAR-W1031-S</b>                  □□□□□: Schurter                  □□□□□: SWITCH PUSHBUTTON SPST 100MA 42V                  □□□□ □□□□ □□: Out stock</p> <p><b>RFQ</b></p>	<p><b>CPS16-LA00A10-SNCSNCF-RI0YGVAR-W1024-S</b>                  □□□□□: Schurter                  □□□□□: SWITCH PUSHBUTTON SPST 100MA 42V                  □□□□ □□□□ □□: Out stock</p> <p><b>RFQ</b></p>
<p><b>CPS16-LA00A10-SNCSNCF-RI0YGVAR-W1028-S</b>                  □□□□□: Schurter                  □□□□□: SWITCH PUSHBUTTON SPST 100MA 42V                  □□□□ □□□□ □□: Out stock</p> <p><b>RFQ</b></p>	<p><b>CPS16-LA00A10-SNCSNCF-RI0YGVAR-W1022-S</b>                  □□□□□: Schurter                  □□□□□: SWITCH PUSHBUTTON SPST 100MA 42V                  □□□□ □□□□ □□: Out stock</p> <p><b>RFQ</b></p>