



CPS19-LA00A10-SNCSNCWF-RI0CWVAR-W1007-S

□□□□ □□□: CPS19-LA00A10-SNCSNCWF-RI0CWVAR-W1007-S
 □□□□ / □□□: Schurter
 □□□□ □□□□□: SWITCH PUSHBUTTON SPST 100MA 42V
 □□□□ □□□: [PDF](#) CPS19-LA00A10-SNCSNCWF-RI0CWVAR-W1007-S.pdf
 □ RoHS □□□: □□□ □□ / RoHS □□□□
 □: □□□ □□□
 □□□□□ □□□□: DHL/Fedex/TNT/UPS/EMS



□□□ □□□□ □□□□ □□□□. □□□□
 □□□□□ □□□□□ □□□□□.

□ CPS19-LA00A10-SNCSNCWF-RI0CWVAR-W1007-S □□□□ □□□□□□□

□□□□ □□□	CPS19-LA00A10-SNCSNCWF-RI0CWVAR-W1007-S
□□□□	Schurter
□□□□	SWITCH PUSHBUTTON SPST 100MA 42V
□□□□□□ □□ □□□ / ROHS □□□	□□□ □□ / RoHS □□□□
□□ □□	PDF CPS19-LA00A10-SNCSNCWF-RI0CWVAR-W1007-S.pdf
□□□□□□ □□ - □□	60V
□□□□□□ □□□ - □□	42V
□□□□	Capacitive, Illuminated
□□□□□ □□	Wire Leads
□□□□ □□□□	Off-On
□□□□□	CPS
□□□□ □□□□□ □□□□	Circular - 19.10mm Dia
□□□□	Bulk
□□□□ □□□ □□□	-40°C ~ 60°C
□□□□□ □□□□	Panel Mount, Front
□□□□□□ □□□□ □□□ (□□□□□□)	1 (Unlimited)
□□□□□□ □□□□	-
□□□□□ □□ □□□ / ROHS □□□	Lead free / RoHS Compliant
□□□□□ □□□	IP67 - Dust Tight, Waterproof
□□□□□ □□□□ (□□□□)	5 ~ 28 VDC
□□□□□ □□□□, □□□	LED, Cyan/White
□□ □□□ □□□□	Finger Guide, G Symbol
□□□□□□□ □□	-
□□□□ □□□□	Pushbutton Switch SPST Capacitive, Illuminated Panel Mount, Front
□□□□ □□□	100mA (AC/DC)
□□□ - □□□□□ / □□	Silver
□□□□	SPST
□□□□□□□ □□□□	Round, Button, Flush

□□□□ □□□□□

Schurter CPS19-LA00A10-SNCSNCWF-RI0CWVAR-W1007-S	□ CPS19-LA00A10-SNCSNCWF-RI0CWVAR-W1007-S □□□□	CPS19-LA00A10-SNCSNCWF-RI0CWVAR-W1007-S □□□□
CPS19-LA00A10-SNCSNCWF-RI0CWVAR-W1007-S □□	CPS19-LA00A10-SNCSNCWF-RI0CWVAR-W1007-S □□□□	CPS19-LA00A10-SNCSNCWF-RI0CWVAR-W1007-S □□□□
□ CPS19-LA00A10-SNCSNCWF-RI0CWVAR-W1007-S □□□□ □□□ □□□□	CPS19-LA00A10-SNCSNCWF-RI0CWVAR-W1007-S □□□□ □□□□ □□□□	□ CPS19-LA00A10-SNCSNCWF-RI0CWVAR-W1007-S □□□ □□□□
CPS19-LA00A10-SNCSNCWF-RI0CWVAR-W1007-S □□□□□	CPS19-LA00A10-SNCSNCWF-RI0CWVAR-W1007-S □□□□	Schurter CPS19-LA00A10-SNCSNCWF-RI0CWVAR-W1007-S □□□□
Schurter CPS19-LA00A10-SNCSNCWF-RI0CWVAR-W1007-S	Schurter □□□□	□ Schurter □□□□
Schurter CPS19-LA00A10-SNCSNCWF-RI0CWVAR-W1007-S	Schurter Inc. CPS19-LA00A10-SNCSNCWF-RI0CWVAR-W1007-S	

□□□□ □□□□

<p>CPS19-LA00A10-SNCSNCWF-RI0CWVAR-W1003-S □□□□□: Schurter □□□□□: SWITCH PUSHBUTTON SPST 100MA 42V □□□□ □□□□ □□: Out stock</p> <p>RFQ</p>	<p>CPS19-LA00A10-SNCSNCWF-RI0CWVAR-W1013-S □□□□□: Schurter □□□□□: SWITCH PUSHBUTTON SPST 100MA 42V □□□□ □□□□ □□: Out stock</p> <p>RFQ</p>
<p>CPS19-LA00A10-SNCSNCWF-RI0CWVAR-W1009-S □□□□□: Schurter □□□□□: SWITCH PUSHBUTTON SPST 100MA 42V □□□□ □□□□ □□: Out stock</p> <p>RFQ</p>	<p>CPS19-LA00A10-SNCSNCWF-RI0CWVAR-W1004-S □□□□□: Schurter □□□□□: SWITCH PUSHBUTTON SPST 100MA 42V □□□□ □□□□ □□: Out stock</p> <p>RFQ</p>
<p>CPS19-LA00A10-SNCSNCWF-RI0CWVAR-W1011-S □□□□□: Schurter □□□□□: SWITCH PUSHBUTTON SPST 100MA 42V □□□□ □□□□ □□: Out stock</p> <p>RFQ</p>	<p>CPS19-LA00A10-SNCSNCWF-RI0CWVAR-W1001-S □□□□□: Schurter □□□□□: SWITCH PUSHBUTTON SPST 100MA 42V □□□□ □□□□ □□: Out stock</p> <p>RFQ</p>
<p>CPS19-LA00A10-SNCSNCWF-RI0CWVAR-W1006-S □□□□□: Schurter □□□□□: SWITCH PUSHBUTTON SPST 100MA 42V □□□□ □□□□ □□: Out stock</p> <p>RFQ</p>	<p>CPS19-LA00A10-SNCSNCWF-RI0CWVAR-W1008-S □□□□□: Schurter □□□□□: SWITCH PUSHBUTTON SPST 100MA 42V □□□□ □□□□ □□: Out stock</p> <p>RFQ</p>
<p>CPS19-LA00A10-SNCSNCWF-RI0CWVAR-W1005-S □□□□□: Schurter □□□□□: SWITCH PUSHBUTTON SPST 100MA 42V □□□□ □□□□ □□: Out stock</p> <p>RFQ</p>	<p>CPS19-LA00A10-SNCSNCWF-RI0CWVAR-W1010-S □□□□□: Schurter □□□□□: SWITCH PUSHBUTTON SPST 100MA 42V □□□□ □□□□ □□: Out stock</p> <p>RFQ</p>
<p>CPS19-LA00A10-SNCSNCWF-RI0CWVAR-W1012-S □□□□□: Schurter □□□□□: SWITCH PUSHBUTTON SPST 100MA 42V □□□□ □□□□ □□: Out stock</p> <p>RFQ</p>	<p>CPS19-LA00A10-SNCSNCWF-RI0CWVAR-W1002-S □□□□□: Schurter □□□□□: SWITCH PUSHBUTTON SPST 100MA 42V □□□□ □□□□ □□: Out stock</p> <p>RFQ</p>